



**Thank you for purchasing ADC Poly Duct. They are typically used for “light-duty”, temporary installations. Be careful handling them because they can be damaged easily. They are supplied with adhesive fasteners based on 6’ centers. Select desired location of fasteners. Peel off one of the two outside paper strips and stick to the polyduct at the fold. Once fastened repeat with other paper strip.**

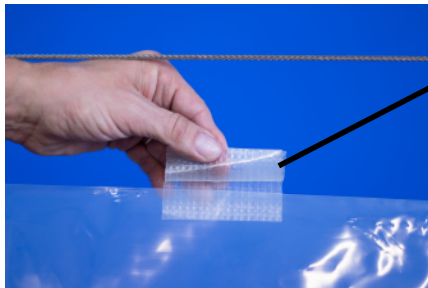


POLY CLIP

**Once the fasteners are attached the polyducts can be installed to a support or a cable. This can be accomplished by the use of a “S” hook or wire ties. Hang the polyducts and stretch to length. End cap of Polyduct may be taped closed from the factory. If cut in the field the duct can be taped or tied to close end. The end must be closed in order for the air entering to fill and inflate the tube. Check the end of the Polyduct before installation.**

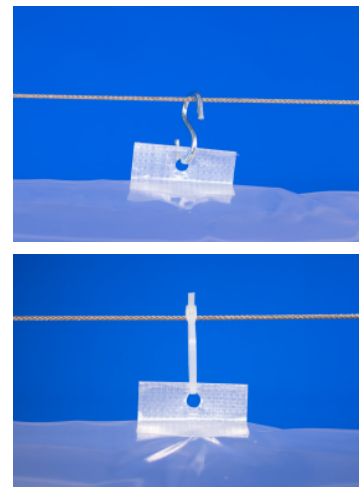

**We have two other types of hanging fasteners. Poly clips which snap and puncture the top seam and use a S hook or wire tie. Barrel hangers that use an inner and outer clip and a hanger**

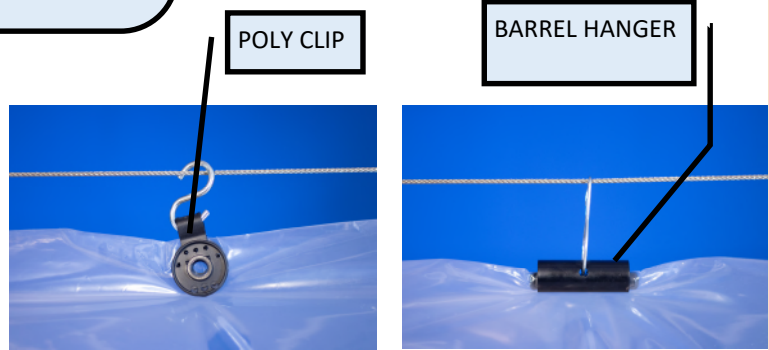

**Install worm gear band over polyducts after slipping polyducts over collar or open end of air handler. Inflate duct and make sure it is straight with no kinks. If polyducts is flap check or adjust air volume to correct. If the problem persists then contact supplier. Material will become damaged with prolonged flapping.**



WORM GEAR BAND